



SPARE PARTS LIST BFC6  
(version BFC6-7)

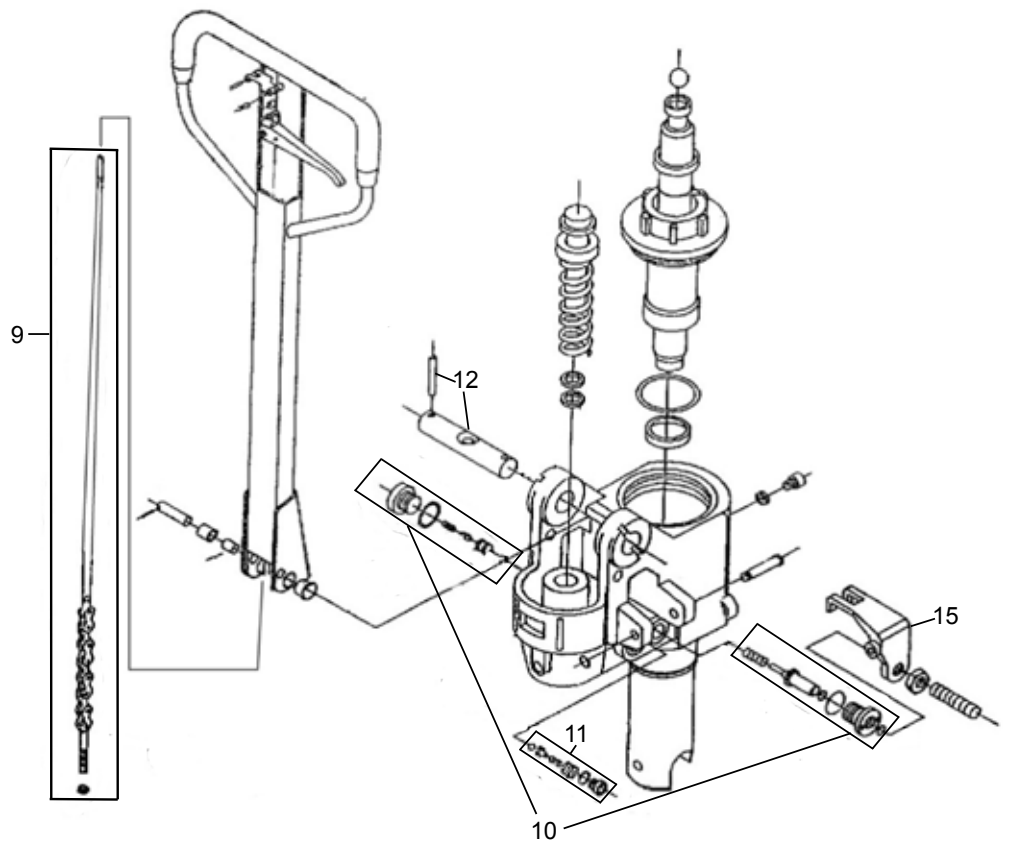

**SPARE PARTS LIST BFC6**  
(version BFC6-7)

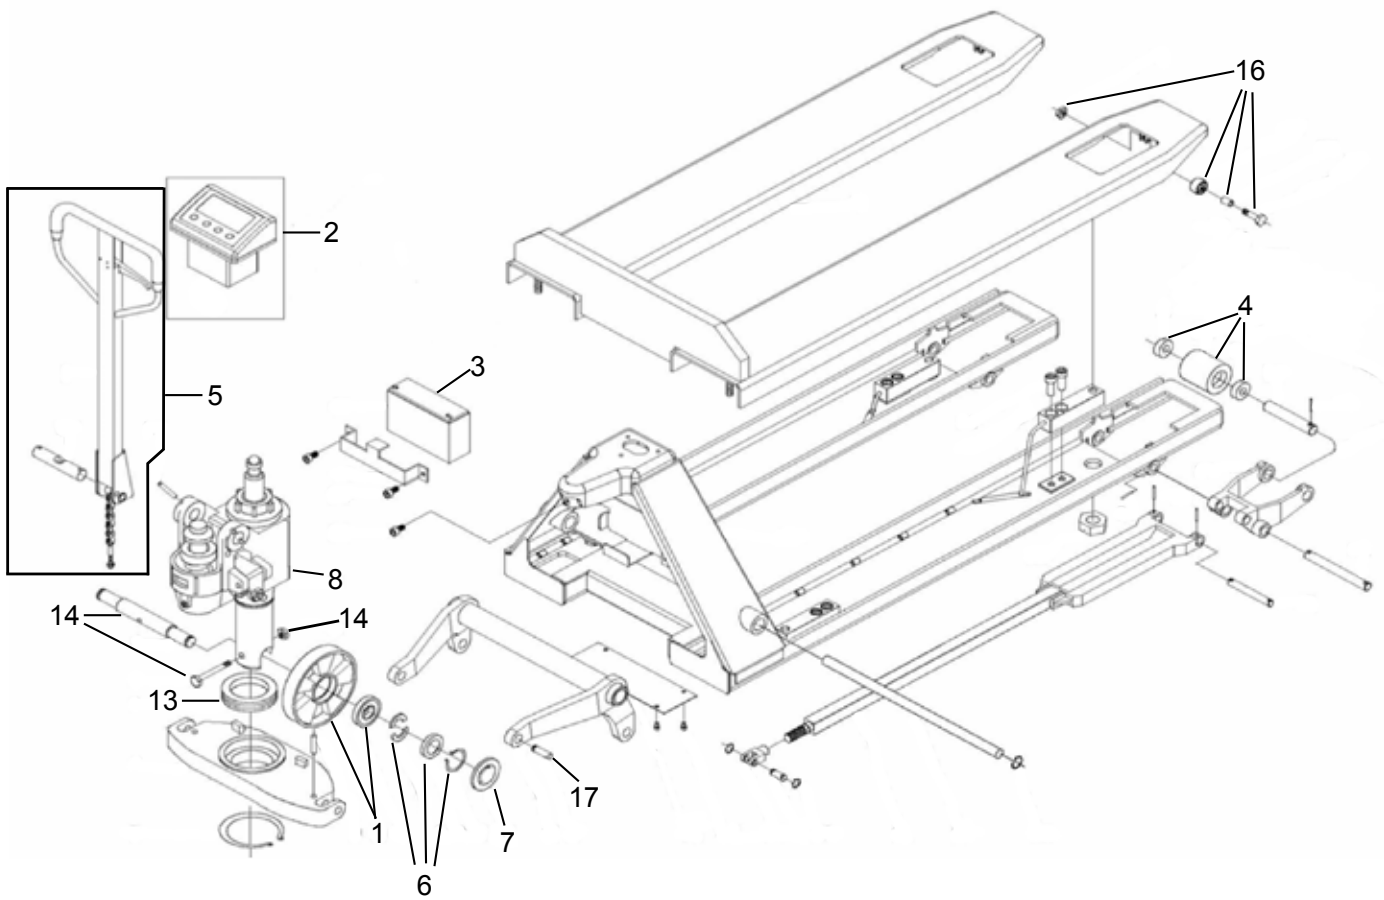

Pos.	Part no.	Benævnelse	Description	Benennung	Pcs.
1	105101	Styrehjul nylon m/lejer	Steer.wheel nylon with bearing	Lenkrolle Nylon m/Lager	2
2	105100	Display	Display	Display	1
3	105103	Batteri 6V 10Ah	Battery 6V 10Ah	Batterie 6V 10Ah	1
4	105102	Gaffelhjul nylon m/lejer	Fork wheel nylon with bearing	Gabelrolle Nylon m/Lager	2
	105104	Lader	Charger	Ladegerät	1
5	105001	Håndtag kpl.	Handle cpl.	Deichsel Kpl.	1
6	105012	Halvmåner, skive, låsering	Half-moon/washer/locking ring	Halbmond/Scheibe/ Schliessring	2
7	105003	Hjulkapsel	Wheel cap	Radkappe	2
8	105006	Pumpe kpl.	Pump cpl.	Pumpe Kpl.	1
9	105002	Kæde m/møtrik og stang	Chain with nut/axle	Kette mit Mutter und Stange	1
10	105010	Ventil kpl.	Valve cpl.	Ventil Kpl.	1
11	105011	Overtryksventil kpl.	Safety valve, cpl.	Überdrückventil Kpl.	1
12	105014	Håndtagsaksel	Handle axle	Deichselachse	1
13	105015	Trykleje	Thrust bearing	Drucklager	1
14	105017	Styrehjulsaksel + skrue	Steering wheel axle + screw	Lenkradachse + Schraube	1
15	105021	Udløserarm	Release arm	Auslösearm	1
16	105022	Indkøringshjul	Lead-in wheel	Einfahrrolle	2
17	105024	Aksel til travers	Axle f. thrust plate	Achse f/Druckplatte	2
	105000	Pakningsæt kpl.	Gasket set cpl.	Dichtungssatz Kpl.	1