



LFRRM / LFSRRM

SPARE PARTS

-Addition to LF/LFS spare parts list

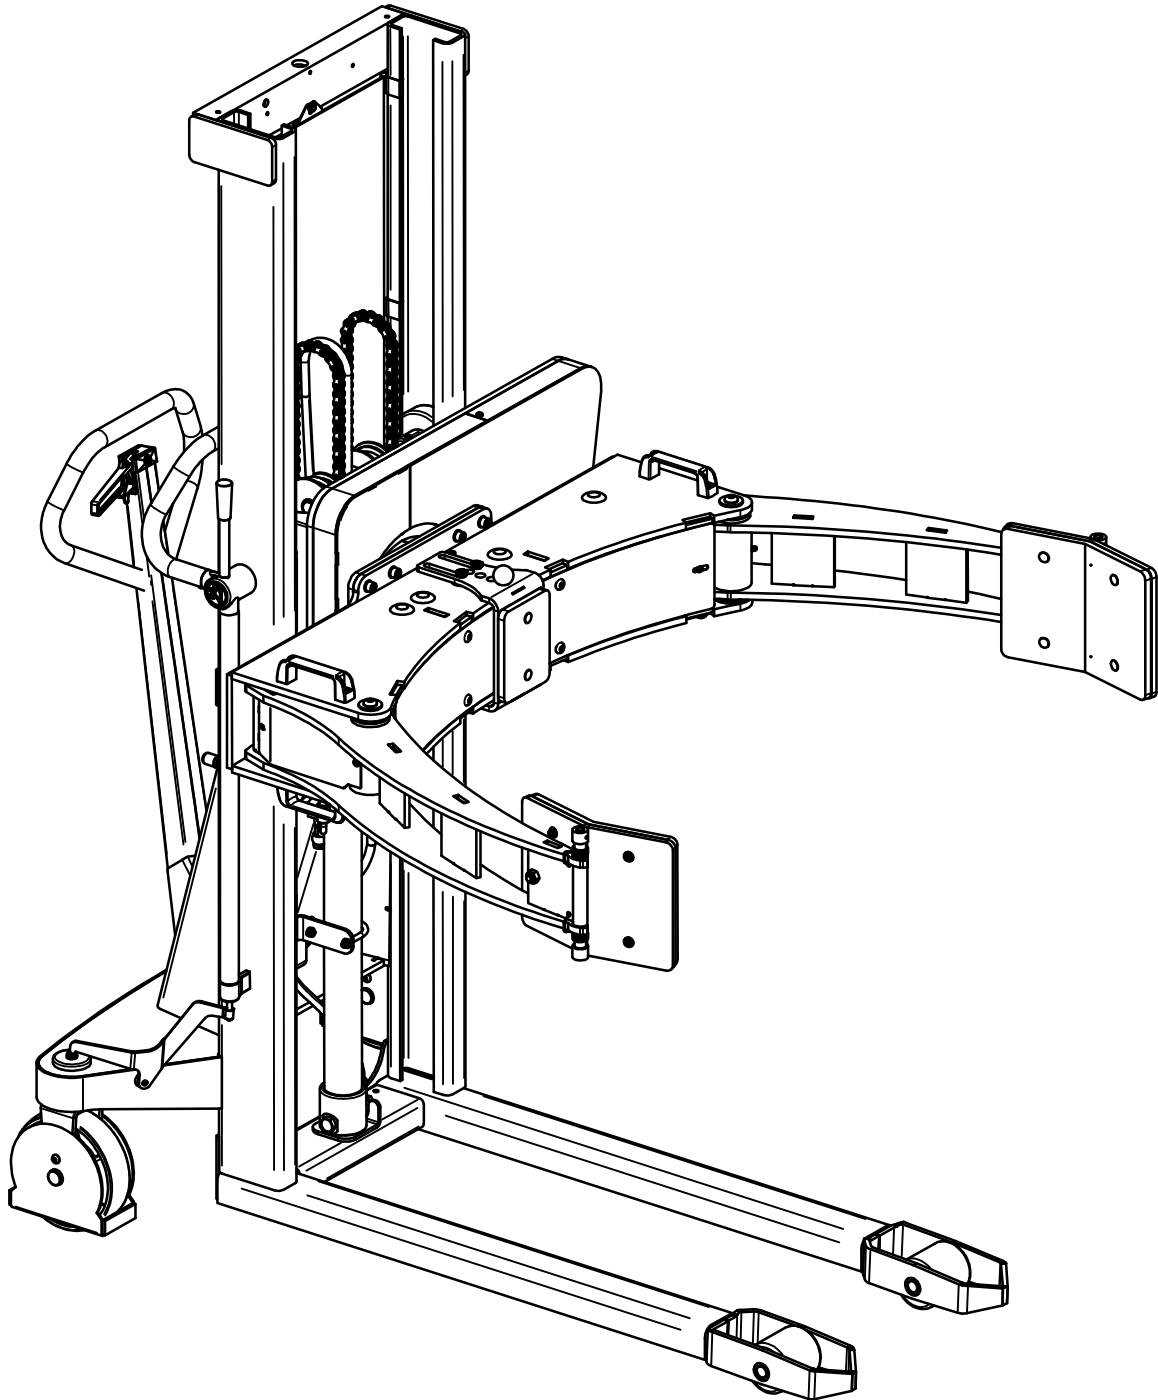

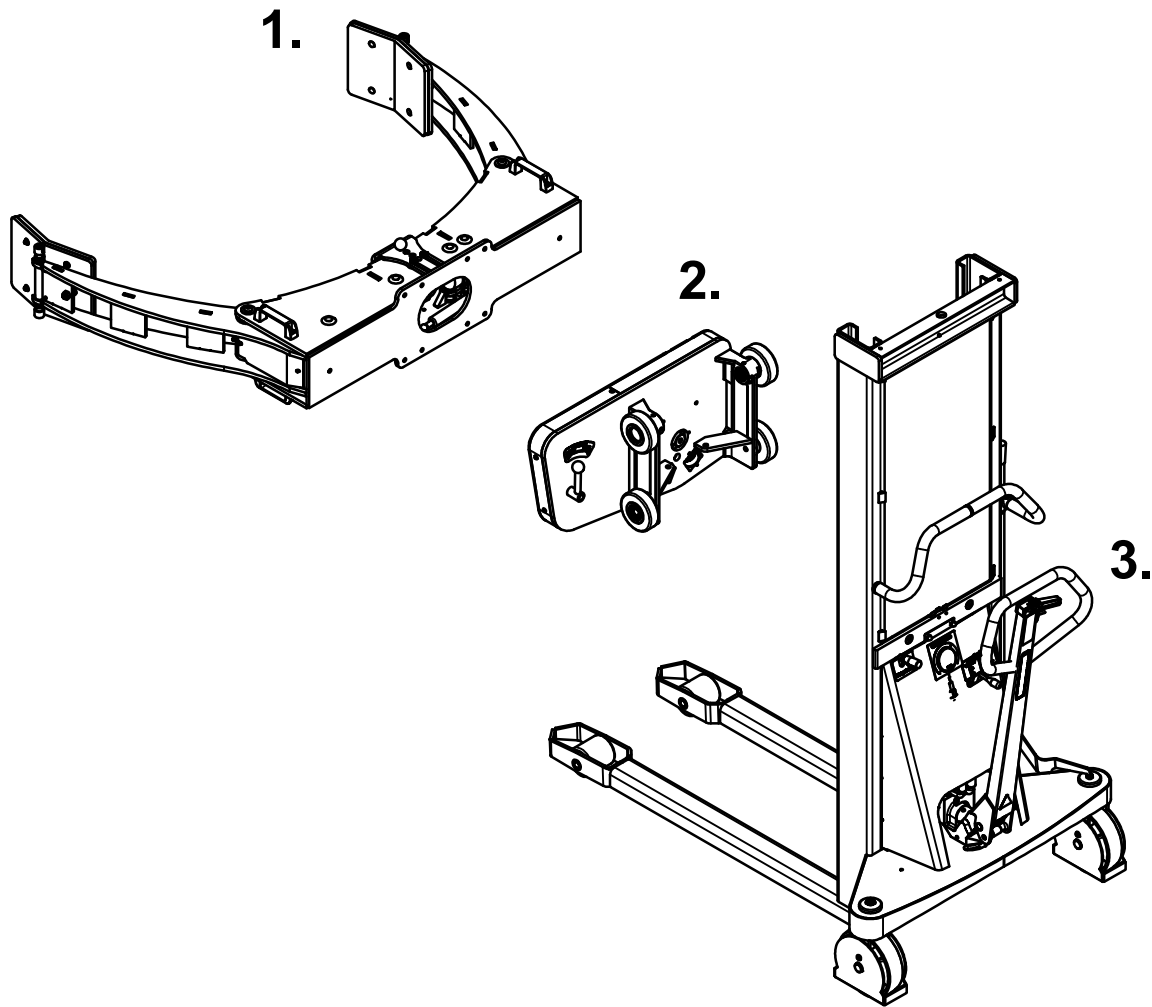

Index

1.Reel clamp.....	3
2.Rotator console.....	6
3.Parts on truck.....	8

The correct spare parts are obtainable from your dealer.
When ordering, please state:


- Serial number of the product
- Model number
- Spare part number

When ordering spare parts marked with "Multiple colours", please state one of the following colour codes:

- 1: RAL 2002 (Logitrans red)
- 2: RAL 1028 (yellow)
- 3: An other RAL colour
- 6: black

Ex. 425050-1 => 425050-1-1


Reel clamp

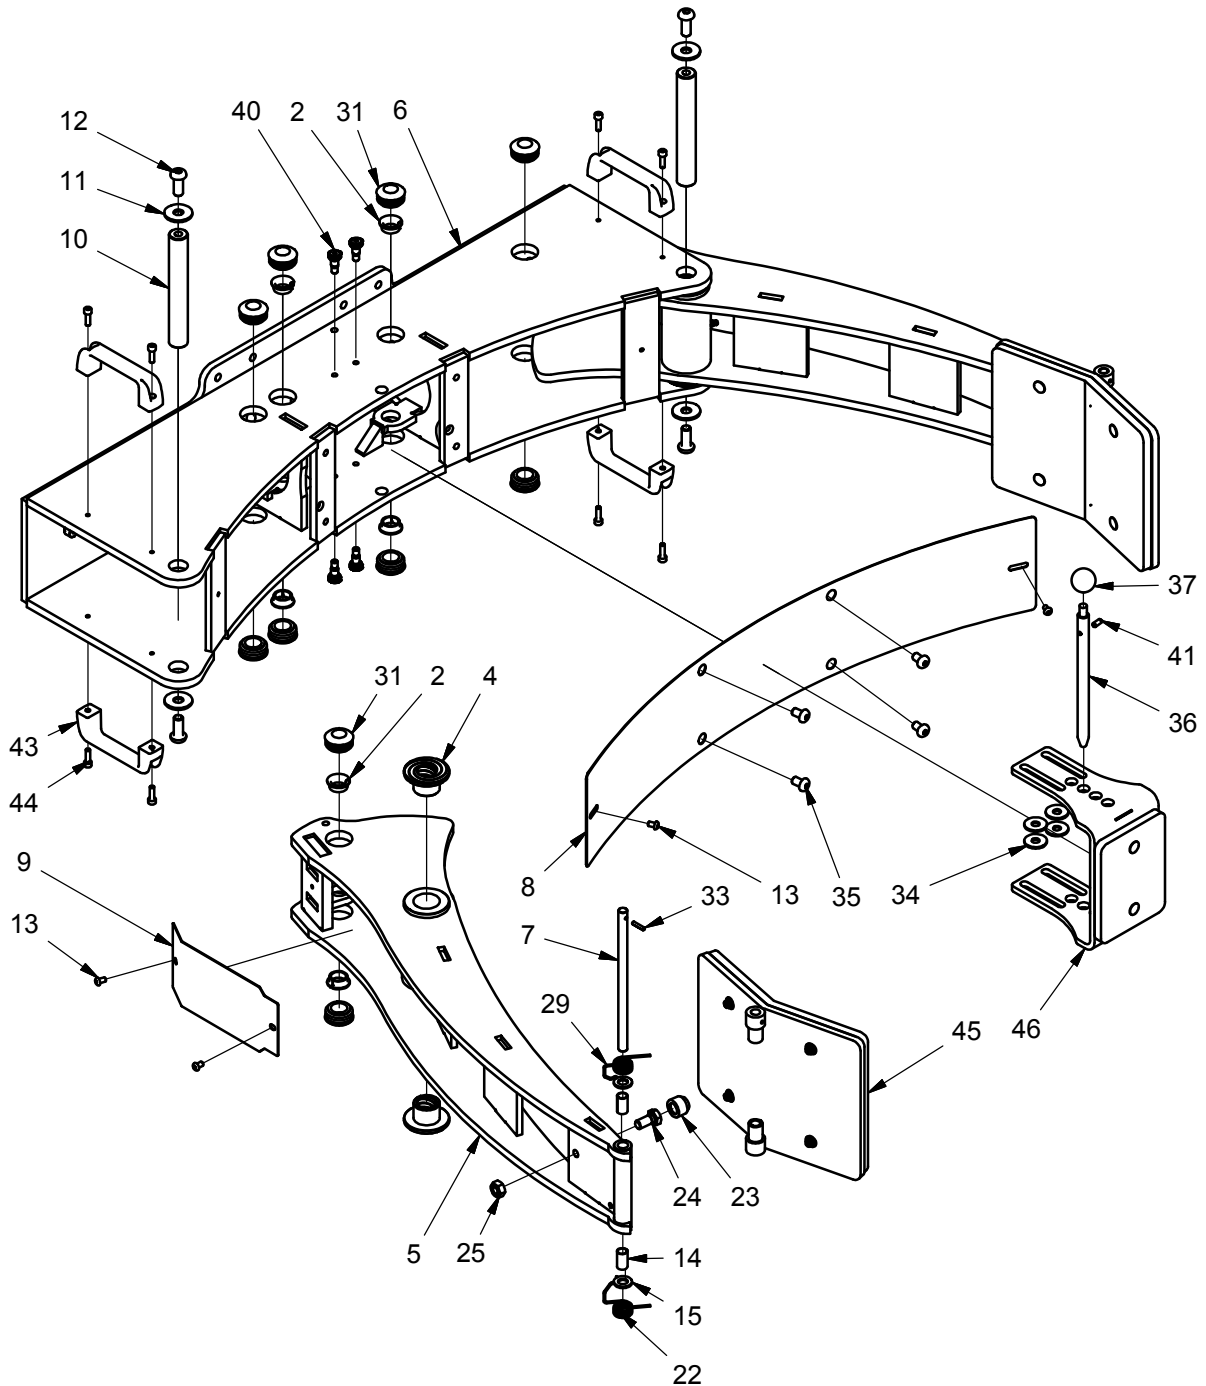

Reel clamp


Item	Part no.	Qty	Description	Note
2	404062	8	Bushing	
4	445220	4	Bronze bearing	
5	445200	2	Gripping arm	Multiple colours
6	445201	1	Gripping console	Multiple colours
7	445225	2	Axle	
8	445218	1	Front cover	Multiple colours
9	445219	2	Side cover	Multiple colours
10	445224	2	Axle f/arm	
11	929130	4	Washer	
12	919230	4	Screw	
13	919610	6	Screw	
14	948123	4	Bushing	
15	924130	4	Washer	
19	990012	2	Lubricator nipple	
22	445153	2	Return spring	
23	999012	2	Rubber cap	
24	915225	2	Screw	
25	922120	2	Nut	
29	445152	2	Return spring	
31	993036	12	Plug cap	
33	931420	2	Spring pin	
34	924112	4	Washer	
35	919120	4	Screw	
36	445244	1	Locking pin	
37	941310	1	Bakelite ball	
40	919226E	4	Bolt	
41	910615	1	Spring pointed screw	
43	996120	4	Handle	
44	912620	8	Screw	
45	445202C	2	Gripping pad	Multiple colours
46	445243C	1	Adjustable support plate	Multiple colours

Reel clamp

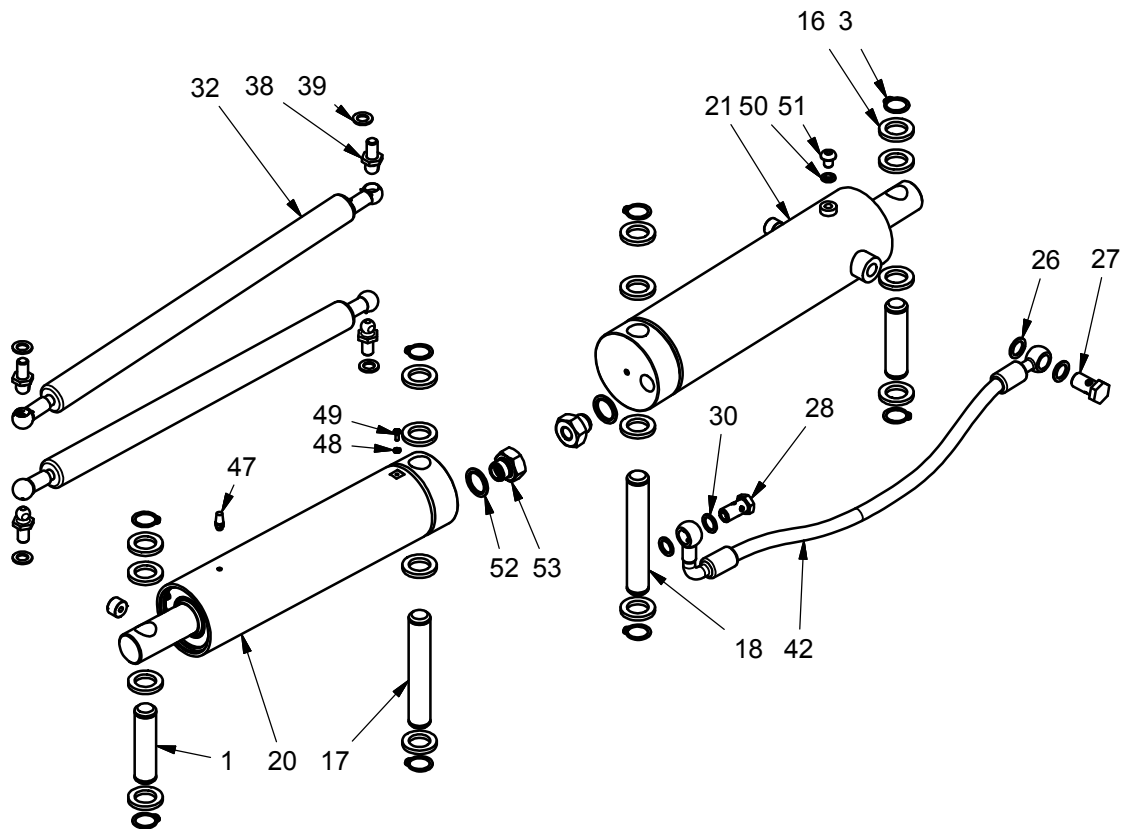

Item	Part no.	Qty	Description	Note
1	445221	2	Assembly axle piston rod	
3	933200	8	Locking ring	
16	929203	16	Axle washer	
17	445223	1	Cylinder assembly axle 2	
18	445222	1	Cylinder assembly axle 1	
20	445227RU	1	Slave cylinder	
21	445226RU	1	Primary cylinder	
26	905145	2	Copper washer	
27	971146	1	Banjo bolt	
28	973015	1	Banjo bolt	
30	905143	2	Copper washer	
32	995140	2	Gas extension spring 1400N	
38	445245	4	Ball stud bolt	
39	924101	4	Washer	
42	445112	1	Cylinder connector (syncro)	
47	966115	1	Silencer/filter	
48	905030	1	Sealing disc	
49	915308	1	Screw	
50	905080	1	Sealing disc	
51	919811	1	Screw	
52	905207	1	Sealing disc	
53	402786	1	Insert	


Rotator console

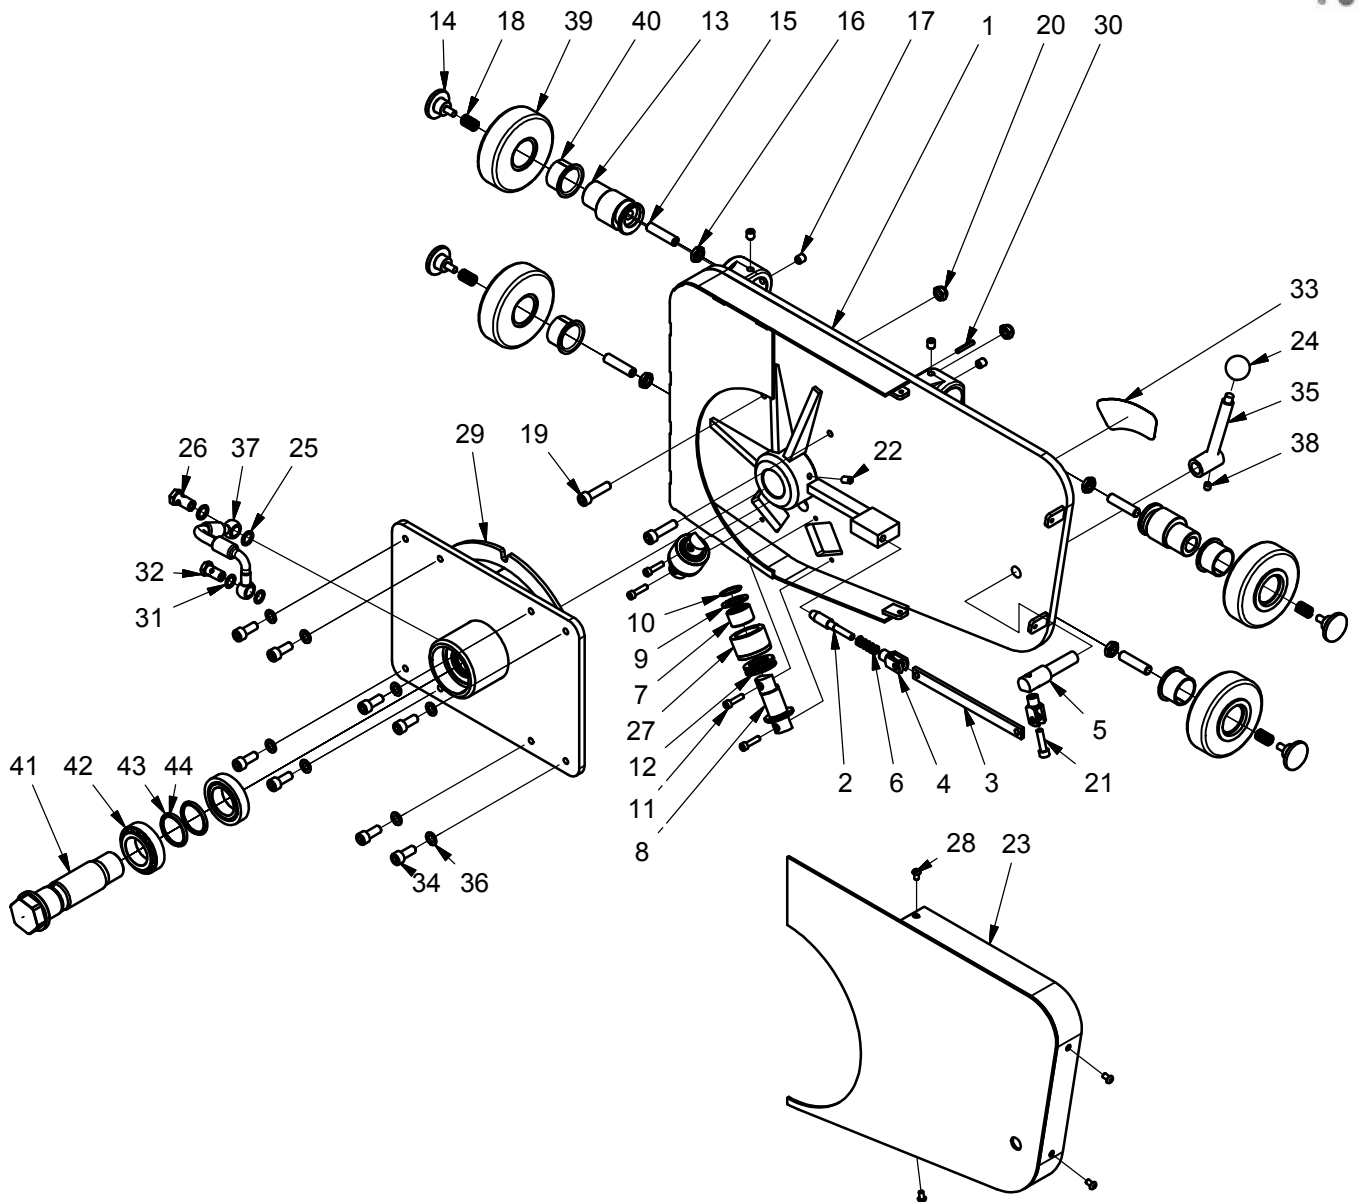

Rotator console

Item	Part no.	Qty	Description	Note
1	445008	1	Rotator console	Multiple colours
2	445017	1	Release pin	
3	445040	1	Release rod	
4	939008	2	Fork head	
5	445042	1	Release axle	
6	958033	1	Spring	
7	949252	2	Roller bearing	
8	404256	2	Support axle	
9	924250	2	Washer	
10	933250	2	Circlip	
11	912625	4	Screw	
12	945025	2	Bearing	
13	404076	2	Eccentric axle	
14	420153	4	Tap for fork bracket	
15	910250	4	Pointed screw	
16	920122	4	Counter nut	
17	910012	4	Pointed screw	
18	958144	4	Spring	
19	912140	2	Screw	
20	921100	2	Lock nut	
21	912830	1	Screw	
22	910816	1	Pointed screw	
23	445012	1	Cover	Multiple colours
24	941310	1	Bakelite ball	
25	905145	2	Copper washer	
26	971146	1	Banjo bolt	
27	445026	2	Support roller Ø45	
28	919610	4	Screw	
29	445024	1	Hydraulic console manual	Multiple colours
30	937530	1	Tubular pin stainless	
31	905143	2	Copper washer	
32	973015	1	Banjo bolt	
33	991264	1	Rotation label	
34	912125	8	Screw	
35	445046	1	Handle f/release axle	
36	924101	8	Washer	
37	445110	1	Hydraulic connector	
38	910808	1	Screw	
39	404073	4	Lift mast roller	Use 404073K for roller with bearing
40	948314	4	Bearing bush	
41	445025	1	Bearing axle	
42	945468	2	Ball bearing	
43	900425	2	O-ring sealing	Replace when replacing 909400
44	909400	2	Rotational sealing	Replace when replacing 900425



Parts on truck

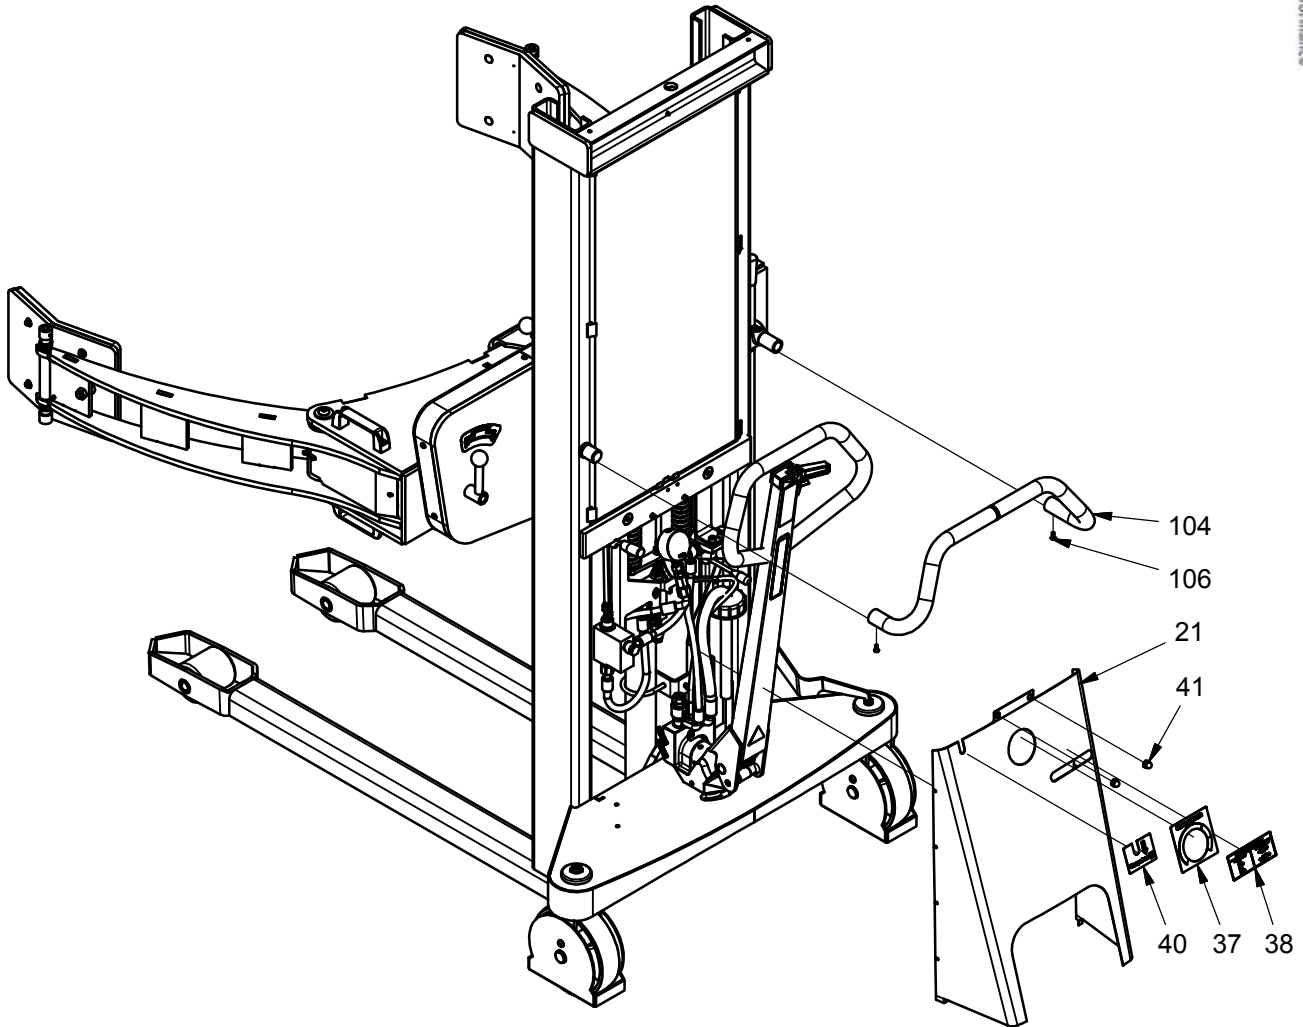

Item	Part no.	Qty	Description	Note
21	445136	1	Rear guard	Multiple colours
37	991265	1	Pressure indication label	
38	991266	1	Function selector label	
40	991268	1	Clamp release label	
41	920080	2	Top nut	
104	420111K	1	Handle tube	Multiple colours
106	919512	2	Screw	

Parts on truck


132 74 134 135 137 136 73 74

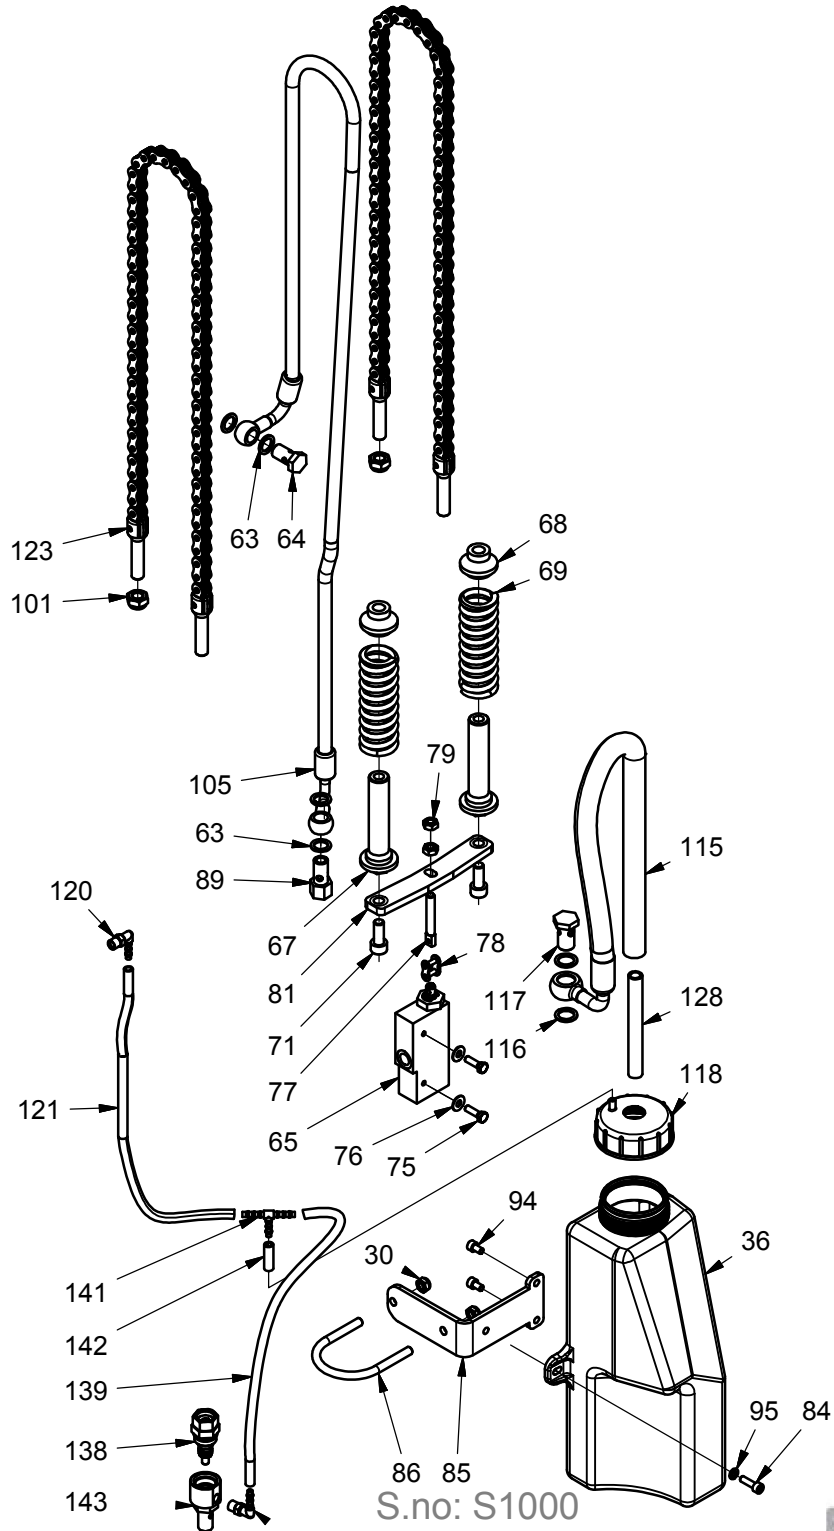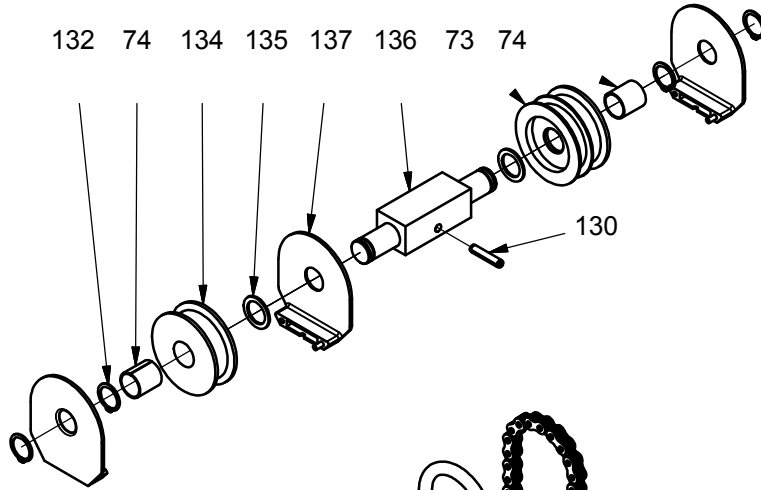

Parts on truck

Item	Part no.	Qty	Description	Note
30	921080	5	Lock nut	
36	978943	1	Oil reservoir 3 liters	
39	991264	1	Rotation label	
40	991268	1	Clamp release label	
41	920080	2	Top nut	
42	445017	1	Release pin	
43	445040	1	Release rod	
44	939008	2	Fork head	
63	905145	13	Copper washer	
64	971146	4	Banjo bolt	
65	445101	1	Safety cut-off valve	
67	445050	2	Axle f/spring	
68	445051	2	Base f/spring	
69	958110	2	Spring	
71	912125	10	Screw	
73	403031	1	Cable roller	
74	404063	2	Bushing f/chain roller	
75	915620	2	Set screw	
76	924060	2	Washer	
77	400605	1	Chain adjuster	
78	951021	1	Chain connector	
79	922080	2	Nut	
81	445149E	1	Bridge spring/valve	
84	912620	9	Screw	
85	445158	1	Mount plate	
86	405355	1	Clamp	
94	912610	2	Screw	
95	924061	1	Washer Ø6 Din 433	
101	921120	4	Lock nut	
105	445114	1	Console safetyvalve connector	
115	970932	1	Hydraulic hose	
116	905160	2	Copper disc	
117	971148	1	Banjo bolt	
118	420607	1	Plastic cover f/tank LF	
120	975114	2	Angular nipple	
123	402704	2	Lifting chain cpl.	
128	445052	1	Suction pipe	
130	931840	1	Straight pin	
132	933250	4	Circlip	
134	404064	1	Chain roller	
135	926250	2	Washer	
136	450306	1	Cross piece f/piston rod	
137	402263	3	Cover for chain roller	
141	978511	1	Tee hose connector	
143	445108	1	Pressure relief valve housing	
138	984837	1	Pressure relief valve	

Parts on truck

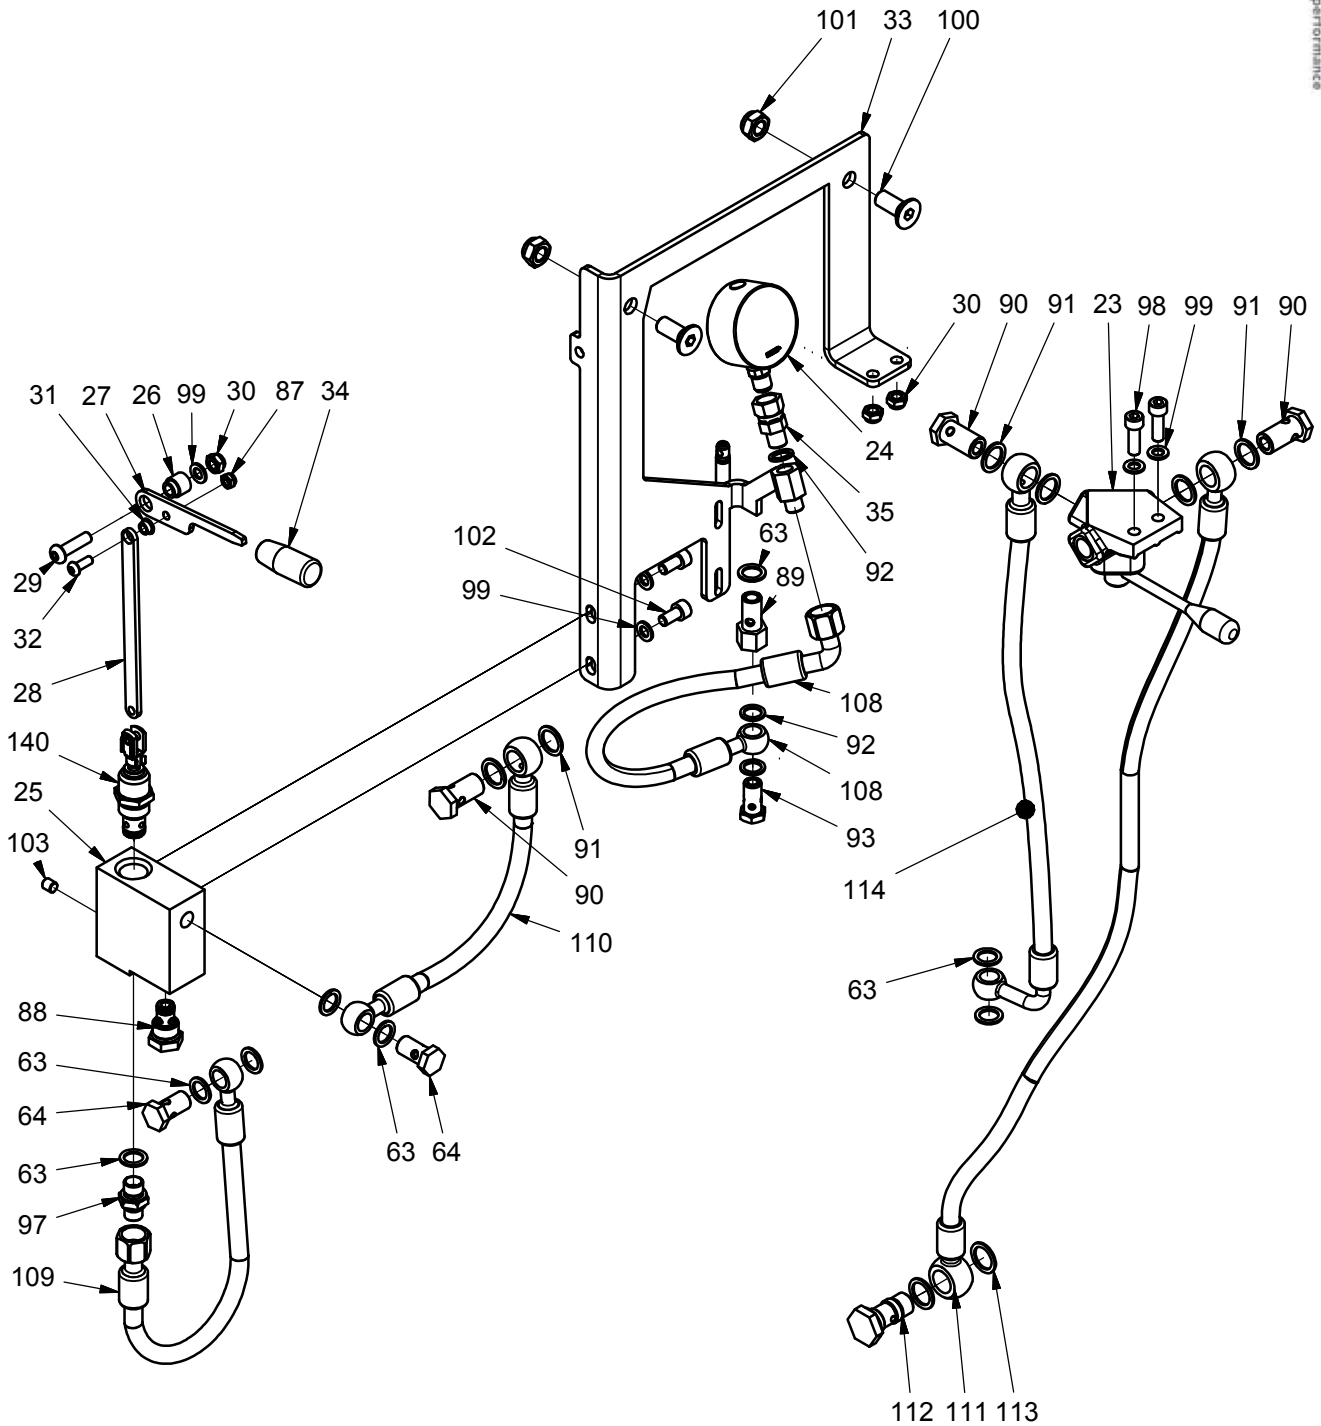

Parts on truck

Item	Part no.	Qty	Description	Note
23	999034	1	3-way valve 3/2 manual	
24	999020	1	Manometer	
25	445099	1	Release valve block	
26	445096	1	Distance bushing	
27	445097	1	Lever release valve	
28	445098	1	Rod release valve	
29	919831	1	Screw	
30	921080	5	Lock nut	
31	445095	1	Bushing	
32	919616	1	Screw	
33	445156	1	Assembly plate 1750 welded	
34	998008	1	Plastic handle	
35	973149	1	Manometer connector 1/4"	
63	905145	13	Copper washer	
64	971146	4	Banjo bolt	
87	921060	1	Lock nut	
88	984836	1	One-way valve f/pump	
89	430059	1	Banjobolt TS	
90	971136	3	Banjo bolt	
91	905172	6	Copper washer	
92	905143	5	Copper washer	
93	973015	2	Banjo bolt	
97	973117	1	Nipple	
98	912825	2	Screw	
99	924080	5	Washer	
100	911231	2	Screw	
101	921120	4	Lock nut	
102	912816	2	Screw	
103	990041	1	Closing plug	
108	445122	1	Safety valve/gauge connector	
109	445121	1	Release valv/safety valv connec	
110	445120	1	3-way valv/release valv connec	
111	445119	1	3-way valve/lift cyl connector	
112	984843	1	Flow valve	
113	905180	2	Copper washer	
114	445118	1	Pump/3-way valve connector	
140	999031R	1	Release valve	