



**S1082**

**LEVEL CONTROL  
LC4 ELF/ELFS - SELF/SELFS**



## 1.0 - Optimum safety



The operator must stand with a full view of the lifting and lowering movements of the equipment.

Clearances around the equipment must be checked before operating. No extraneous objects must be placed under the equipment.

 
**MAKE SURE** that neither forks nor load snag extraneous objects during lifting and lowering.

- See also the instruction manual for the lifting equipment.



A warning label with the below text must be attached to the equipment:

Black lettering on yellow background:



## 2.0 - How to operate the Level Control



NOTE!  
ELF/ELFS  
The brake has to be activated before using the level control.



NOTE!  
Manual operating of the handle is not possible when the level control is active.



## 2.0 - How to operate the Level Control



Push "Power ON" and the green lamp is on.  
 The lifting equipment can start lifting/lowering.



Upwards or downwards positioning can be chosen  
 on the arrows (up/down).

The red lamp (A) is flashing, when the level control is active.

The forks raise/lower after setting the time delay.



### Reading of settings

Use button (B) to choose:

- Detection range
- Time delay before operation
- Actual distance


When reading the setting values, the respective lamps for  
 detection range and time delay before operation are on.

## 2.0 - How to operate the Level Control



### Programming of detection range and time delay before operation

1. Press "Power on". The green lamp is on. The lifting equipment can start lifting/lowering automatically.
2. Use button (B) - choose the requested settings, detection range or time delay before operation (the lamp of the chosen setting lightens).
3. Press the button (B) 3 seconds. The lamp of the chosen setting flashes, when programming is possible. The setting value is shown in the display.
4. Use the arrows (up/down) to change the value.  
Detection range: 0.1 m (min) to 2.0 m (max).  
Time delay before operation: 00 s (min) to 25 s (max)
5. After 10 seconds the unit will store the value and return to normal operations.

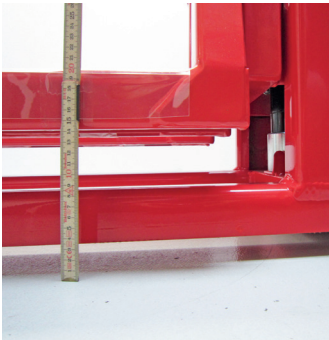


Due to safety the lowering movement will stop automatically at a fork height of approx. 200 mm.



The photocell can be turned 30° to the right or left.  
**NOTE!** The photocell must point across the pallet.

## 2.0 - How to operate the Level Control

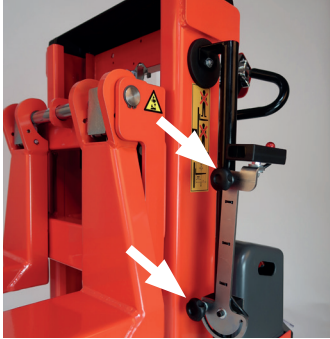

The height of the photo cell can be adjusted on the thumbscrew.

## Error codes

E0	Power consumption Main
E1	Power consumption: UP
E2	Power consumption: DOWN
E3	Power consumption: OUT (white)
E4	Sensor failure (distance sensor)*
E5	External brake

In case of errors, the display and the red lamp will flash.  
 Errors are deleted when the unit is turned off and switched on again.  
 \* This error may occur due to dust, mist and dirt.  
 If the error turns up again after turning off and switching on the unit,  
 please contact your dealer.





---

## **Ergonomic** **Lifting Performance**

**Logitrans A/S**

+45 76 88 16 00

[info@logitrans.com](mailto:info@logitrans.com)

[www.logitrans.com](http://www.logitrans.com)

